



# **UV LED BAR 16**

**User Instructions** 

UVLED Bar16 Introduction

Unpacking: Thank you for purchasing the UVLED Bar16 by American DJ®. Every UVLED Bar16 has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

Introduction: The UVLED Bar16 is part of American DJ's continuing pursuit for creating high quality affordable intelligent fixtures. The UVLED Bar16 is a DMX intelligent LED color wash. This wash can be used in a stand alone mode or connected in a Master/Slave configuration. The unit can also be controlled via DMX controller. This unit has four operating modes: Static mode, program mode, sound active mode, and DMX controlled.

# **A CAUTION**

#### HIGH INTENSITY ULTRAVIOLET LIGHT

AVOID DIRECT EYE & SKIN EXPOSURE.
WEAR PROPER EYE & SKIN PROTECTION.
SEE MANUAL FOR SAFETY INSTRUCTIONS.

RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET (UV) RADIATION! FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET LIGHT

WEAR PROPER EYE AND SKIN PROTECTION.
AVOID PROLONGED PERIODS OF EXPOSURE.
AVOID WEARING WHITE COLOR CLOTHING AND/OR
USING (UV) PAINTS ON SKIN.

AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES SHORTER THAN 11 feet (3.3m).

DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVER PROTECTIVE LENS.

DO NOT LOOK DIRECTLY INTO THE (UV) LIGHT AND/OR VIEW (UV) LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT.

INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DISORDERS, OR INDIVIDUALS USING PHOTOSENSITIVE MEDICATION, MAY RECEIVE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET (UV) LIGHT EMITTED FROM THIS FIXTURE.

#### Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

### UVLED Bar16 General Instructions

To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

UVLED Bar16 Features

- 4 Operating Modes
- Electronic Dimming 0-100%
- Built in Microphone
- DMX-512 protocol
- 3 DMX Channels

#### **UVLED Bar16**

### **Warranty Registration**

The UVLED Bar16 carries a 3 year (1095 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase and warranty. You may also register your product online at www. americandj.com. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.

### UVLED Bar16 Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

- 1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
- 2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
- 3. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

### UVLED Bar16 Safety Precautions

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product out doors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 3 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when: A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance.
  - C. The appliance has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

Power Supply: The American DJ $_{\odot}$  UVLED Bar16 voltage is between 9v  $\sim$  240v. Because of voltage setup of the unit you do not have to worry about wall output voltage. This unit is compatiable with all wall outputs. Be sure to only use the included I.E.C. power cable supplied with the unit, this cable matches the current requirements of the unit.

**DMX-512:** DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

**DMX Linking:** DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX Operation): The UVLED Bar16 can be controlled via DMX-512 protocol. The UVLED Bar16 three channel DMX unit. The DMX address is set on the side panel of the UVLED Bar16. Your unit and your DMX controller require a approved DMX-512 110 Ohm Data cable for data input and data

output (Figure 1). We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all professional sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.



Figure 1

UVLED Bar16 Set Up

**Notice:** Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

 


Figure 2



XLR Pin C	Configuration
Pin 1 = Grour	nd
Pin 2 = Data	Compliment (negative)
Pin 3 = Data	True (positive)

Figure 3

**Special Note:** Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.



Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal, (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.

Figure 4

*5-Pin XLR DMX Connectors.* Some manufactures use 5-pin XLR connectors for DATA transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion			
Conductor	3-Pin XLR Female (Out)	5-Pin XLR Male (In)	
Ground/Shield	Pin 1	Pin 1	
Data Compliment (- signal)	Pin 2	Pin 2	
Data True (+ signal)	Pin 3	Pin 3	
Not Used		Do Not Use	
Not Used		Do Not Use	

### **Program Mode/Sound Active Mode:**

In this mode you can choose one of seven programs to run or you can choose a sound active mode. When running one of the seven programs the speed of the program can be adjusted.

- 1. Plug the fixture in and press the MODE button until "3XXX" is displayed.
- 2. Using the UP or DOWN buttons select one of the seven programs. If you want to run sound active mode, press the UP or DOWN buttons until "3-So" is displayed.
- 3. To adjust the speed of your selected program, press the MODE button once more so that "SP-X" is displayed. Now use the UP or DOWN buttons to adjust the speed. One being the slowest, nine being the fastest.

### Static Mode:

**UVLED Bar16** 

In this mode the UV light will remain static. You can adjust the intensity in this mode as well.

- 1. Plug the fixture in and press the MODE button until "2XXX" is displayed.
- 2. Press the UP or DOWN buttons to adjust the intensity of the light.

### DMX Mode:

Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs.

- 1. This function will allow you to control each individual fixture's traits with a Elation® DMX 512.
- Press the MODE button until "1.XXX" is displayed. Press the UP or DOWN buttons to select your desired address. Once you have found your desired DMX address, plug in the fixture via the XLR connections to any standard DMX controller.
- 3. Please see pages 10-13 for DMX values and traits.

## **Operating Modes:**

on again.

You can use the UVLED Bar16 in either a stand alone mode or a master/slave configuration, there are 4 modes to choose from:

LED Display On/Off: To make the display stay ON all of the time

press the MODE until "ds-X" is displayed. Press the UP button so that "ds-1" is displayed. The LED display will stay ON all of the time.

To make the display turn OFF after 10 seconds, press the UP button

so that "ds-2" is displayed. When the LED display turns OFF after 10

seconds, press any button for at least 3 seconds to turn the display

- Static Mode The fixture will remain static and you can control the intensity of the static mode.
- Programs/Sound Active Mode In this mode you can run one of seven programs or run a sound active mode.
- DMX control mode This function will allow you to control each individual fixtures traits with a standard DMX 512 controller such as as the Elation® Show Designer<sup>TM</sup>.

### Master-Slave Operation:

This function will allows you to link units together to run in a Master-Slave mode. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units built-in programs. Any unit can act as a Master or as a Slave however, only one unit can be programmed to act as the "Master."

### Master-Slave Connections and Settings:

- Daisy chain your units via the XLR connector on the rear of the unit. Use standard XLR microphone cables to link your units together. Remember that the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (master) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
- 2. Using the Master unit, choose your desired mode or program and connect the "Slave" unit or units.
- 3. On the "Slave" unit(s) press the MODE button until "1-SL" is displayed. They will now follow the "Master" unit.

### UVLED Bar16 DMX Values & Functions - 3 Channels

Channel	Value	Function
1		DIMMER
	0 - 255	0% - 100%
2		PROGRAM SPEED
	1 - 255	SLOW - FAST
3		PROGRAMS
	0 - 30	DIMMING
	31 - 61	STROBE
	62 - 92	INCREASING INTENSITY
	93 - 123	DECREASING INTENSITY
	124 - 154	INCREASE - DECREASE INTENSITY
	155 - 185	THREE FLASH
	186 - 216	ONE AND TWO FLASH
	217 - 247	FLASH
	248 - 255	SOUND ACTIVE

### UVLED Bar16 Fuse Replacement

First unplug the power. Locate and remove the unit's power cord. Once the cord has been removed located the fuse holder located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new one. The fuse holder has a built-in socket for a spare fuse be sure not to confuse the spare fuse with active fuse.

### UVLED Bar16 Trouble Shooting

Listed below are a few common problems the user may encounter, with solutions.

#### Unit not responding to DMX:

1. Check that the DMX cables are connected properly and are wired correctly (pin 3 is "hot"; on some other DMX devices pin 2 may be 'hot'). Also, check that all cables are connected to the right connectors; it does matter which way the inputs and outputs are connected.

#### Unit does not respond to sound:

1. Quiet or high pitched sounds will not activate the unit.

If problems are not resolved; Contact American DJ® for service.

### UVLED Bar16 7 i ghca Yf Gi ddcfh

American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Service hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337 Fax: (323) 582-2941 E-mail: support@adj.com

To purchase parts online visit http://parts.adj.com

UVLED Bar16 Warranty

#### MANUFACTURER'S LIMITED WARRANTY

- A. American DJ, Inc. hereby warrants, to the original purchaser, American DJ and American Audio products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service you must obtain a Return Authorization number (RA#) before sending back the product. Contact American DJ, Inc. Service Department at 800-322-6337. Send the product only to the American DJ, Inc. factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ, Inc. will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in it's original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ, Inc. shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ, Inc. concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ, Inc. factory unless prior written authorization was issued to purchaser by American DJ, Inc.; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ, Inc. will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ, Inc. under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.
- E. American DJ, Inc. reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ, Inc. in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ, Inc. be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to American DJ and American Audio Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

#### MANUFACTURER'S LIMITED WARRANTY PERIODS:

- All American Audio Products = 1-year (365 day) Limited Warranty (except V-Plus Series Amplifiers)
- All American Audio V-Plus Series Amplifiers = 3-year (1095 day) Limited Warranty
- American DJ Lighting and American DJ Branded Products = 1-year (365 day) Limited Warranty (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding Laser Products, lamps, and Star Tec Series)
- American DJ Laser Products and Star Tec Products = 90-Day Limited Warranty
- American DJ L.E.D. Products = 3-year (1095 day) Limited Warranty (excluding motors which have a 1-year (365 day Limited Warranty)

@American DJ® - www.adj.com - UVLED Bar16 Instruction Manual Page 11

UVLED Bar16 Specifications

### Model: UVLED Bar16

#### **SPECIFICATIONS:**

Working Position: Any safe working position Voltage: 100V ~ 240V, 50/60Hz

LEDs: 16 x 1W LEDs

Power Draw: 30W

Beam Angle: 10 Degrees Vertical

40 Degrees Horizontal

Fuse: 1Amp

Weight: 5lbs./ 2.2Kgs.

Dimensions: 12.5" (L) x 2.5" (W) x 7" (H)

320 (L) x 61 (W) x 175 (H) mm

Colors: UV

DMX Channels: 3 DMX Channels Warranty: 3 Year (1095 days)

**Auto Sensing Voltage:** This fixture contains a electronic ballast, which will auto sense the voltage when it is plugged into the power source.

**Please Note:** Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

©American DJ Supply American DJ World Headquarters:

6122 S. Eastern Ave. Los Angeles, CA 90040 USA

Tel: 323-582-2650 / Fax: 323-523-2941

Web: www.adj.com / E-mail: info@adj.com

American DJ Europe Junostraat 2 6468 EW Kerkrade Netherlands

service@americandj.eu / www.americandj.eu

Tel: +31 45 546 85 00 / Fax: +31 45 546 85 99