

SMARTFADE™

NORMAL MODE CHEAT SHEET

Select Operating Mode

With the console off,
Press and hold the power button.
*LCD displays: Select Startup Mode:
>Normal*
Use the wheel to select the Normal mode.
Press √.

Patch dimmers to channels

From Status display on the LCD:
Press √. *LCD displays: SmartFade Menu /
Channels*
Move wheel till Patch is displayed.
Press √. *LCD displays: Patch / Patch by
Dimmer.*
Press √. *LCD displays: Patch by Dimmer /
Patch Mode: >Blind*
Select patch mode using wheel.
Press √. Select dimmer number using
wheel.
Press √. Select channel number using wheel.
Press √. Continue process for each dimmer.

To unpatch dimmers

From SmartFade Menu / Patch display:
LCD displays: Patch / Patch by Dimmer.
Move wheel till – special is displayed.
Press √. *LCD displays: Unpatch dimmer.*
Press √. Select dimmer number using wheel.
Press √. *LCD displays: Unpatch?*
Press √. Continue process for each dimmer.

Press << to revert to status display

Setting channels at levels

Use the faders to set levels for individual
control channels.

Bump buttons fade green proportionally.

To select first available channels, press
either [1-24] or [1-48]

To select second half of available
channels, press [25-48] or [49-96]

Record a memory

Set channels at desired levels.
Press [REC MEM].
Press a blinking full red bump button.
(Press half red to overwrite/delete existing)
Memory is recorded to that fader.

(Press [Clear] to cancel recording.)

Playback a memory

Press [MEMS].
Move the corresponding fader.

Record a sequence (effect or chase)

Press [REC SEQ].
Press a flashing yellow bump button (21-24)
Press one of the following:
[MEMS] and the bump button of a memory
[1-24]... and the bump button of a channel
Use the wheel to set timing for the step
Continue to insert either memories or
channels for each step.
When complete, press [REC SEQ]

Playback a sequence

Press [MEMS].
Move the corresponding fader (21-24).

To create a Stack (or list of cues)

Press [STACK]
Press [REC SEQ].
Note the [STACK] button blinks yellow
Press [STACK] again
Press one of the following:
[MEMS] and the bump button of a memory
[1-24]... and the bump button of a channel
Use the wheel to set timing for each step
Continue to insert either memories or
channels for each step.
Remember: 99 steps in a stack.
When complete, press [REC SEQ]

Playback a stack

Press [STACK] to enter Stack mode.
Press [▶..▶▶] / Go button.
Press [II] to pause if step (cue) in process or
to go back if step (cue) is complete.
Press [CLEAR] [▶..▶▶] to reset to the top of the
Stack (Step 0).

Delete a stack

Press [REC SEQ]
Press [STACK].
Select >Erase & make new using wheel.
Press [REC SEQ]. (Records an empty
stack)